


STANLEY®

エアムーバー

SXAM0011-JP 取扱説明書

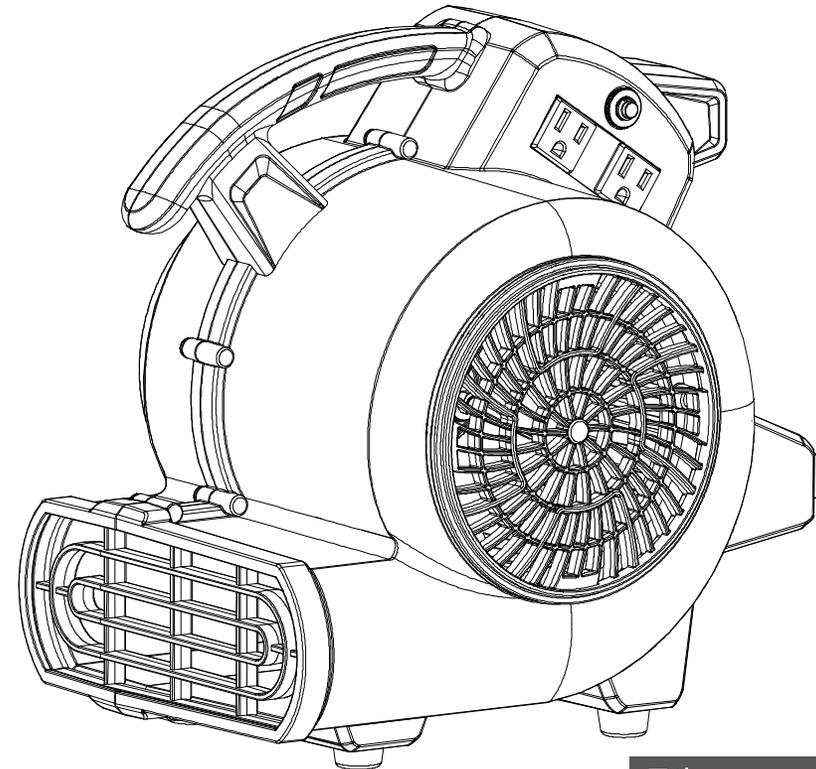

目次	
安全上のご注意	P1
各部の名称	P2
製品の仕様	P3
使用用途	P3
ご使用方法	P3
お手入れ・保管の仕方	P8
故障かなと思ったときは	P9
保証規定	P10
保証書	P12

- この度はお買い上げいただき、誠にありがとうございます。
- ご使用前に「安全上のご注意」を必ずお読みください。
- この取扱説明書はお使いになる方がいつでも見ることができるよう保管してください。
- 「保証書」は大切に保管してください。

STANLEY®

アルトンジャパン株式会社

安全上のご注意

図記号について

-  事故を防ぐため、してはならない事を示します(禁止)
-  事故や故障を防ぐため、していただきたい事を示します(指示)
-  図と共に「警告」と示してある場合は、死亡または重傷を負う可能性がある内容を示しています。図と共に「注意」と示してある場合は、軽傷または物的損害が生じる可能性がある内容を示します。

警告 火災、感電、けがなどの思わぬ事故を防ぐため

-  ▶ エアームーバー以外の用途で使用しないこと
- ▶ 電源プラグやコードを傷つけない、引っ張らない、加工しない、無理に曲げない、上に重い物をのせない、束ねない、挟み込ませないこと
- ▶ 差込がゆるい、またはガタつきがあるコンセントを使用しないこと
- ▶ 濡れた手で電源プラグに触らない、電源プラグに水をかけないこと
- ▶ 子供など操作が不慣れな人に触らせないこと
- ▶ 風を火気や燃焼器具に向けて使用しないこと
- ▶ 機器の上に座ったり、足場として使わないこと
- ▶ アルミニウムなどの爆発性粉じんの近くで使用しないこと
- ▶ 灯油、ガソリン、シンナー、ベンゼンなどの引火性のものの近くで使用しないこと
- ▶ 直射日光下で長時間使用しないこと

警告 火災、感電、けがなどの思わぬ事故を防ぐため


-  ▶ 水たまりの上で使用しないこと
- ▶ 機器が作動中に指や工具などの異物を機器に入れないこと
- ▶ 感電防止用漏電遮断器を設備していない電源で機器を使用しないこと
- ▶ 送風口や吸気口を手や物でふさがないこと
- ▶ 髪の毛や衣服などを吸気口に近づけないこと

安全上のご注意

警告 火災、感電、けがなどの思わぬ事故を防ぐため

-  ▶ 以下のような異常を感じた時や故障時は直ちに使用を中止し、電源を切り、電源プラグをコンセントから抜くこと
 - 異常な音や焦げたようなにおいがする
 - 電源プラグ、電源コード、モータ部が異常に熱い
 - 電源コードを動かすと通電したりしなかったりする
 - 触れるとビリビリと電気を感じる

各部の名称

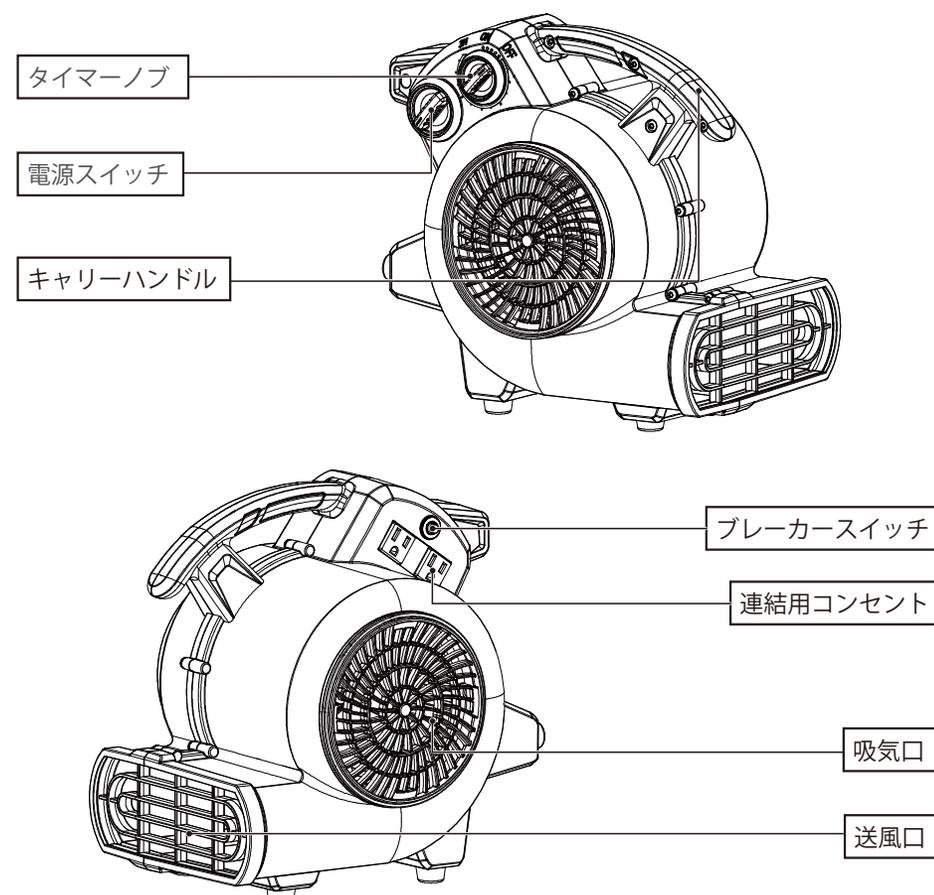

製品の仕様

型式	SXAM0011-JP	消費電力	130W / 180W
定格電源	100V 50/60Hz	最大風速	14.55m/s
最大風量	13m ³ /min	送風角度	3段階(0度/45度/90度)
本体重量	約4.4 kg	騒音値 (2m)	≤62dB(A)
コード長	3m		

※改良のため、主要機能および形状などは変更する場合がありますので、ご了承ください。

使用用途

- ・ 塗装部や濡れた床、カーペット、壁、天井などの乾燥
- ・ 衣類の乾燥
- ・ 室内の空気循環や空調機器の冷気・暖気の循環、臭気除去
- ・ エアーカーテンによる虫よけ・冷気保持
- ・ 夏場の作業での熱中症対策、屋根裏、ロフトでの作業時の送風

ご使用方法

1 風量調整


風量は弱、中、強の3段階で風量調整可能です。

弱、中、強につまみを合わせると運転を開始します。


運転を止める場合は0(オフ)につまみを合わせてください。




0 (オフ)

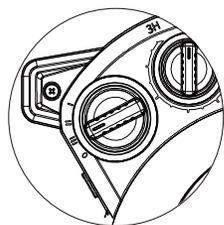

III (強)

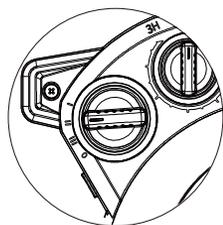

II (中)

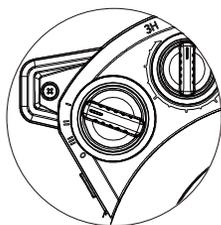


I (弱)

ご使用方法



- 故障や思わぬ事故を防ぐため、次のことを守ってください。
- ・ 電源コードをコンセントにつなぐ際はつまみがオフになっていることを確認してください。
 - ・ ご使用の際は水平で安定した場所に置いてお使いください。
 - ・ 火気の近くや火気に向けて使用しないでください。
 - ・ 転倒や破損の可能性がありますので、人や物が通る場所において使用しないでください。
 - ・ 水気のある場所でご使用の際は、必ず接地(アース)を行ってください。
- 詳しくはP6をご参照ください。


2 タイマー

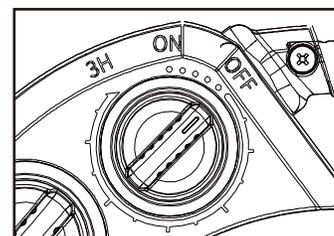



- ・ 時計回りに回すと、タイマーが設定され、分単位でカウントダウンし、自動的に停止します。
- ・ タイマーは最大180分(3時間)まで設定可能です。
- ・ タイマーが「OFF」位置に達すると、本機は動作を停止します。「ON」位置に設定すると、継続的に動作します。



- ▶ ユニットの電源プラグを差し込んだ後、下記に示す設定位置のいずれかにスイッチを回すことで送風機を起動できます。
- ▶ 開封状態：タイマーノブとスイッチは両方とも0(OFF)の位置にあります。

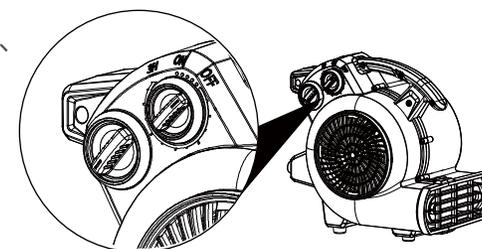

操作状態：まず電源スイッチをIII、II、またはIに設定します。次にタイマーを反時計回りに回してONに、または時計回りに回してOFF-3Hに設定します。

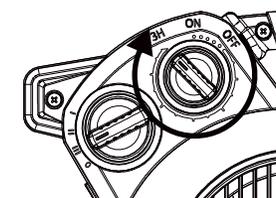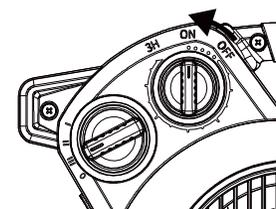

ご使用方法




警告


- ・タイマーがONに設定されている場合、機械は手動で停止するまで動作を続けます。停止するには、電源スイッチを0に切り替えるかタイマーノブをOFFの位置に回してください。
- ・タイマースイッチがOFF-3Hに設定されている場合、機械はカウントダウン状態にあり、タイマー終了時に自動的に停止します。

3 角度調整


角度は0度、45度、90度の3段階で調整可能です。
目的に応じて最適な角度でご使用ください。

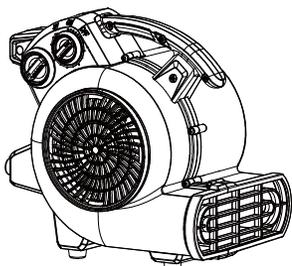

0度
ワックスがけした後や濡れた床、カーペットの乾燥、室内の空気循環、臭気除去などに最適です。

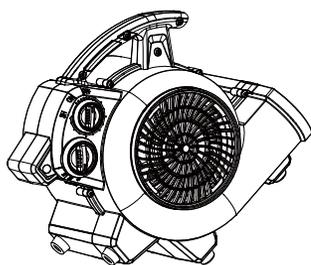

45度
壁部の塗料や衣類の乾燥、暖房器具使用時の空気循環などに最適です。

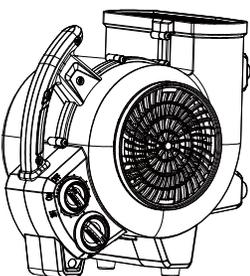


90度
天井部の塗料の乾燥や屋根裏での作業時、虫よけや冷氣保持のエアーカーテンなどに最適です。

ご使用方法

4 接地(アース)について

本製品はシングル絶縁構造ですので、ご使用前に電源に感電防止用漏電遮断器が設置されていることを確認し、接地(アース)を行ってからお使いください。

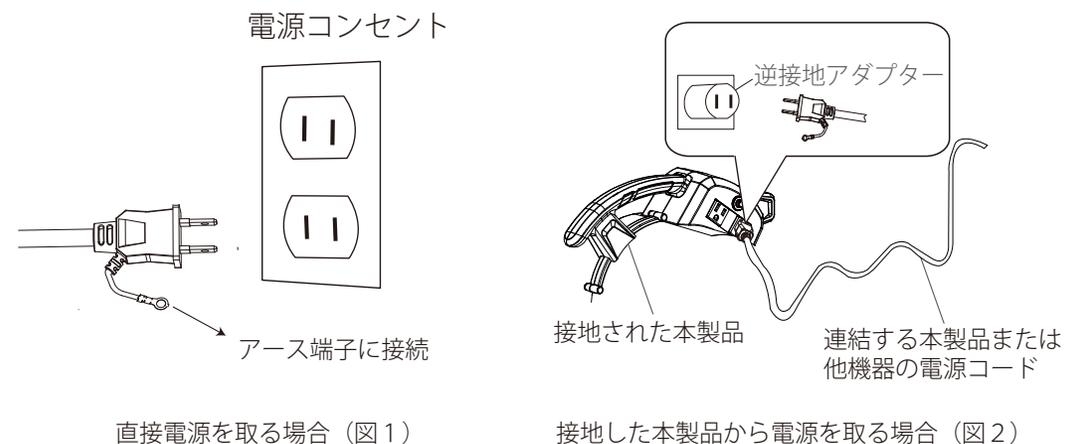


警告


- 故障や思わぬ事故を防ぐため、次のことを守ってください。
- ・感電や漏電を防ぐため、本製品同士で連結使用する際は、図2の通り、2ピンから3ピンに変換できる逆接地アダプターをお使いください。
 - ・本製品から他機器の電源を取る場合も同様に、他機器がシングル絶縁構造である場合は、図2の通り、感電や漏電を防ぐため、必ず逆接地アダプターを用いて接地してください。
 - ・アース棒やアース板を地中に埋め込んでアース線を設置するなどの電気工事は電気工事士の資格が必要となります。お近くの電気工事店にご相談ください。

5 連結使用・他機器との使用

本製品同士の連結使用の場合、50Hz地域で7台、60Hz地域で5台まで連結可能です。本製品は最大1000W使用可能です。接続する他の機器との消費電力の合計が1000W以内となるようにしてください。

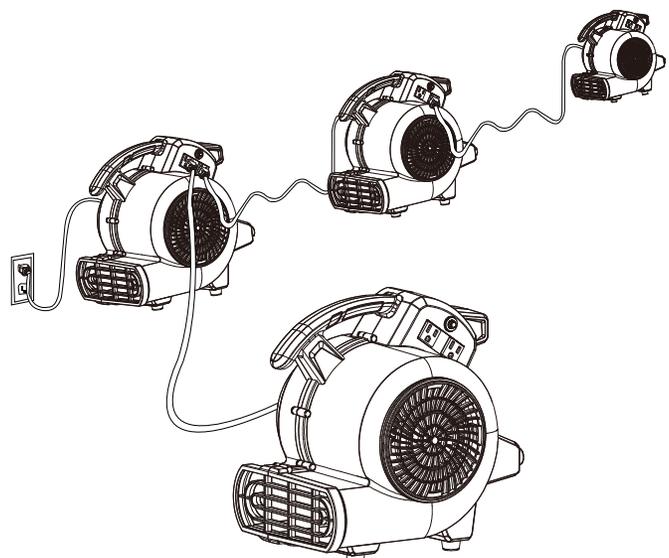

本製品には過負荷時に本体を過電流から保護するため、サーキットプロテクタが内蔵されています。サーキットプロテクタが働いた時は電流が遮断されますので、接続している機器の電源を一度全てオフにして、右のブレーカースイッチを押した後、接続している機器の電源を再度入れ直してください。

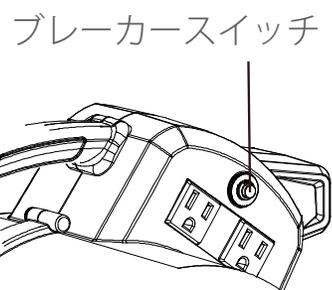

！ このエアムーバーにはモーター過熱保護装置が装備されています。保護装置が作動すると予告なく電源が切れることがあります。作動した場合は、スイッチをOFFの位置に切り、電源プラグを抜いてしばらく待ってから、エアムーバーの電源プラグを差し込み直して再起動してください。



故障や思わぬ事故を防ぐため、次のことを守ってください。
・お手入れは必ず電源プラグをコンセントから抜いた状態で行ってください。
・溶剤を使ってお手入れをしないでください。変形や故障の原因となります。
・本製品に水をかけたり、水に浸けたりしないでください。

日々のお手入れについて

ほこりや粉じんなどの細かな汚れは故障の原因となります。

- 1) 水で薄めた中性洗剤で湿らせた布で本体を拭いてください。
- 2) ほこりや粉じんが多い場所で本製品をご使用の後は、吸気口をエアードスターで吹き付けほこりを飛ばす

保管方法について

- 1) 必ず屋内で保管してください。
- 2) ご使用の後は、コードをキャリーハンドルに巻き付けて保管するか、コードストラップをお使いください。
- 3) 長期間ご使用にならない場合は、ほこりなどの細かなごみの付着を防ぐため、ビニール袋などに入れて保管してください。

故障かなと思ったときは



故障や思わぬ事故を防ぐため、次のことを守ってください。

- ・改造や分解を行わないでください。
- ・普段の使用では見られない異音や振動、発熱があったら直ちに電源を切り、カスタマーサポートにご連絡ください。

症状	原因	対処
電源が入らない	1. プラグがコンセントに差さっていない 2. つまみがオンになっていない 3. サーキットブレーカーが作動している	1. プラグをコンセントに差しこむ 2. つまみをオンにする 3. P7の手順に従い、電源を入れなおす
作動するが、大きな異音がある	本体内部でプロアホイールが筐体に当たって擦れている	アルトンジャパンへお問い合わせください。
作動するが、激しく振動している	1. ごみが吸気口の中に入り込んでいる 2. モーターシャフトが曲がっている	アルトンジャパンへお問い合わせください。
作動するが、空転している	本体内部でプロアホイールが筐体に当たっている	アルトンジャパンへお問い合わせください。
作動するが、すぐに止まってしまう	1. ごみが吸気口の中に入り込んでいる 2. モーターのベアリングが故障している またはモーター内部の電気系統に異常がある —	1. エアーダスターでごみを取り除いてください。 2. アルトンジャパンへお問い合わせください。

保証規定

1) 保証内容

お買い上げいただきました製品に製造上の不具合が生じた場合、アルトンジャパンで無料修理を致します。

2) 保証できない事項について

a) 修理の際の輸送費用

b) 次に示すものに起因すると判定される故障は保証修理できかねます。

- ・取扱説明書の指示に反する使用
- ・お手入れや保管の不備や間違いによるもの
- ・弊社が提示している仕様を超える使用
- ・弊社が認めていない分解及び改造
- ・純正部品や指定する油脂類以外の使用
- ・使用時の不注意による故障（凍結や落下など）

c) 次に示すものは保証修理できかねます。

- ・経年劣化による不具合
- ・プラスチック筐体などの自然退色、電源コードの劣化、部材劣化による性能低下
- ・使用に際し、品質上及び機能上影響のない感覚的現象（作動音や振動など）
- ・台風、水害、雪害などの天災による不具合
- ・薬品、塩害などに起因する不具合
- ・機器の運搬輸送時に起因する損傷

d) 次に示すものの費用は負担しかねます。

- ・機器が使用できなかったことによる不便さ及び損失
- ・この保証書で示す条件以外の補修費用
- ・機器の使用による物の破損、変色、損傷など

3) 出張修理

出張修理は行っておりません。修理はお買い求めいただいた販売店またはアルトンジャパンまでお問い合わせください。

4) 保証の適用

この保証は日本国内で使用される弊社製品にのみ適用されます。国外に持ち出した場合、その時点で保証が抹消されます。

5) 保証修理の申し込み方法

ご購入の際に受領されたレシートあるいは納品書と次項保証書を添付の上、お買いあげいただいた販売店もしくはアルトンジャパンまで不具合品とともにお送りください。レシートあるいは納品書がない場合、無料修理はお受けいたしかねますのでご了承ください。

IMPORTANT INSTRUCTIONS

Definitions: Safety Alert Symbols And Words


This instruction manual uses the following safety alert symbols and words to alert people to hazardous situations and the risk of personal injury or property damage.

⚠ DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.

⚠ CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.

NOTES: Indicates a practice not related to personal injury which, if not avoided, **may** result in **property damage**.

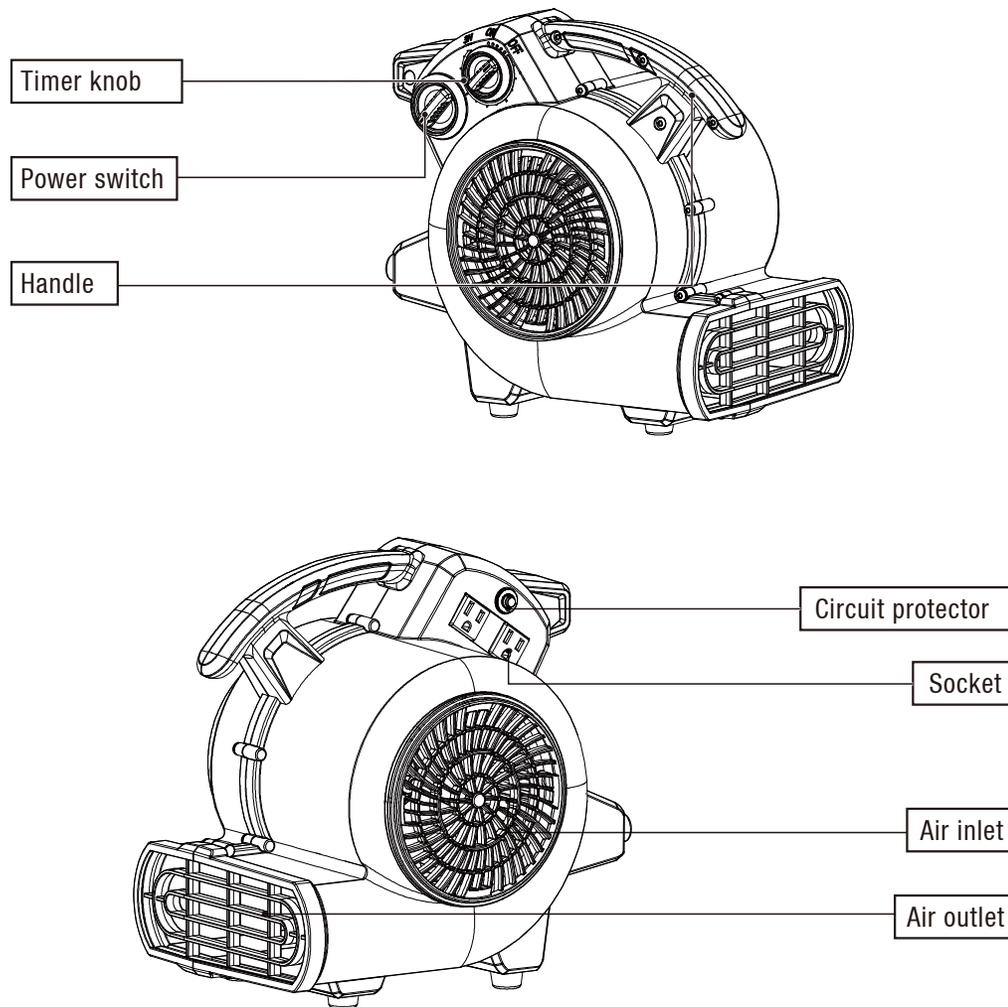

⚠ WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

👤 WARNING: To reduce the risk of injury, read the instruction manual.

IMPORTANT INSTRUCTIONS

⚠ WARNING: When using electric appliances, always follow basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following:

Before using this appliance, read and follow all instructions.

⚠ WARNING: To reduce the risk of electric shock. Do not expose to rain. Store indoors.

- Do not leave the appliance when it is connected to a power source. Unplug it from outlet when not in use and before servicing.
- Do not allow the appliance to be used as a toy. Pay close attention when the appliance is used by or near children.
- Use this appliance ONLY as described in the manual.
- Do not use this appliance with a damaged cord or plug. If the appliance is not working correctly, or if it has been dropped, damaged, left outdoors, or dropped in water, return it to a service center.
- Do not pull or carry this appliance by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep cord away from heated surfaces.
- Do not unplug this appliance by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or appliance with wet hands.
- Do not put any objects into the openings of the appliance. Do not use the appliance with any opening blocked; keep free of dust, lint, hair and anything else that may reduce air flow.
- Keep hair, loose clothing, fingers, and all body parts away from the openings and moving parts.
- Turn off all controls before unplugging appliance.
- Use extra care when using on or near stairs.
- If the Air Mover is not working as it should, has missing parts, has been dropped, damaged, left outdoors, or dropped into water, call customer service.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person who is responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

⚠ WARNING

- TO REDUCE THE RISK OF INJURY, USERS MUST READ INSTRUCTION MANUAL. DO NOT RUN UNATTENDED. DO NOT PICK UP FLAMMABLE, COMBUSTIBLE OR HOT MATERIALS. DO NOT USE AROUND EXPLOSIVE DUST, LIQUIDS OR VAPORS. ELECTRICAL DEVICES PRODUCE ARCS OR SPARKS WHICH CAN CAUSE FIRE OR EXPLOSION. DO NOT USE AT FILLING STATIONS OR ANYWHERE GASOLINE IS STORED OR DISPENSED. DO NOT VACUUM TOXIC OR CARCINOGENIC MATERIALS OR OTHER HEALTH ENDANGERING MATERIALS SUCH AS ASBESTOS OR PESTICIDES. ALWAYS USE PROPER EYE AND RESPIRATORY PROTECTION. TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE TO RAIN. STORE INDOORS. WHEN SERVICING, USE ONLY IDENTICAL REPLACEMENT PARTS. DO NOT USE AS A STEP STOOL.

PRODUCT SPECIFICATIONS

Model	SXAM0011-JP	Rated Power	130W / 180W
Power	100V 50/60Hz	Air Speed(MAX)	14.55m/s
Air Flow(MAX)	13m ³ /min	Operating Position	3 angles(0° /45° /90°)
Net Weight	4.4 kg	Noise	≤62dB(A)
Power Cord	3m		

INTENDED USE

- Drying of painted surfaces, wet floors, carpets, walls, ceilings, etc.
- Clothes Drying
- Indoor air circulation and the circulation of cool or warm air from air conditioning equipment, odor removal
- Insect repellent and cold air retention using air curtains
- Heatstroke prevention measures for summer work, ventilation during work in attics and lofts


OPERATING INSTRUCTIONS

1 POWER SWITCH


Turn to "0" position to switch the air mover OFF. Turn to any speed position to switch the air mover ON.

Turn clockwise to set the desired fan speed.


There are 3 speeds: I, II, III. I is the lowest speed and III is the highest.

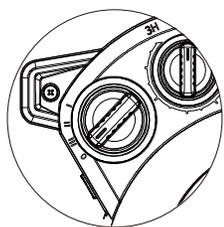


0 (Off)

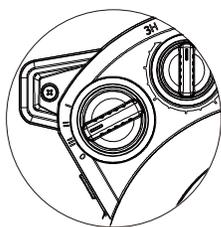

III (STRONG)

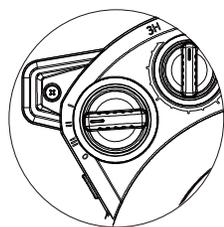

II (MEDIUM)

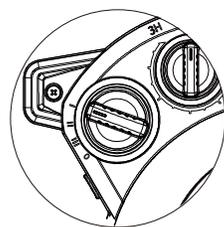

I (WEAK)

OPERATING INSTRUCTIONS




WARNING

To prevent malfunctions and unexpected accidents, please observe the following precautions:

- Before plugging the power cord into an outlet, ensure the switch is turned off.
- When in use, place the unit on a level, stable surface.
- Do not use near open flames or direct it toward flames.
- Do not use in areas where people or objects pass by, as this may cause tipping or damage.
- When using in damp locations, ensure proper grounding (earthing).
For details, please refer to P16.


2 TIMER KNOB

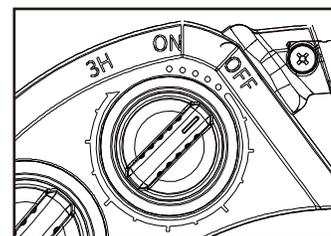



- Turn clockwise to set the timer to count down the minutes to an automatic stop.
- The timer can be set for up to 180 minutes (3 hours).
- When the timer reaches the "OFF" position, the unit stops working. When set to the "ON" position, it will work constantly.



- ▶ Once the unit is plugged in, the air mover can be turned on by rotating the switch to one of the settings shown below.
- ▶ Unboxing status: The timer knob and switch are both at 0 (OFF).

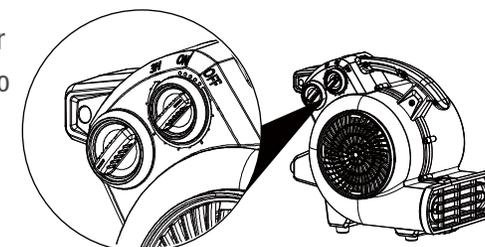

Operating status: First, turn the power switch to III, II, or I; Then turn the timer counterclockwise to ON or clockwise to OFF-3H.

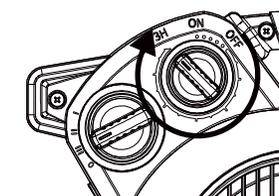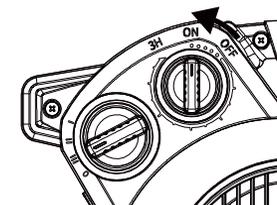

OPERATING INSTRUCTIONS




WARNING

- When the timer is set to ON, the machine will continue to run until shut down manually. To shut it down, turn the power switch to 0 or turn the timer knob to OFF.
- When the timer switch is set to OFF-3H, the machine is in the timing state and will automatically shut down when the timer ends.


3 AIR MOVER POSITION OPERATING

The air mover may be set in one of three operating positions. Pick the position best suited for your application.

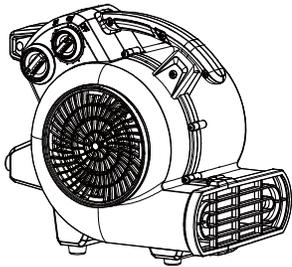


0°

Use the down position for applications such as; drying wet floors, shampooed carpets, etc. To use this position simply place unit on its base.

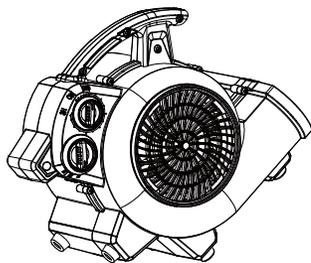

45°

Use the angle position for applications such as, drying plaster on walls or drying wet furniture. To use this position, tilt unit backwards so it rests on the support.

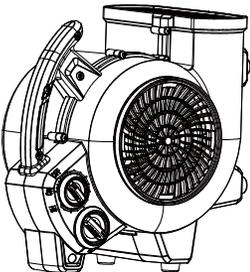


90°

Use the up position for applications such as; drying paint on the ceiling. To use this position, lay the unit on the back side with the front grill pointing towards the ceiling

OPERATING INSTRUCTIONS

4 GROUNDING INSTRUCTIONS

This product features a single insulation structure. Before use, ensure a ground fault circuit interrupter (GFCI) is installed in the power supply to prevent electric shock, and ground the unit before operation.

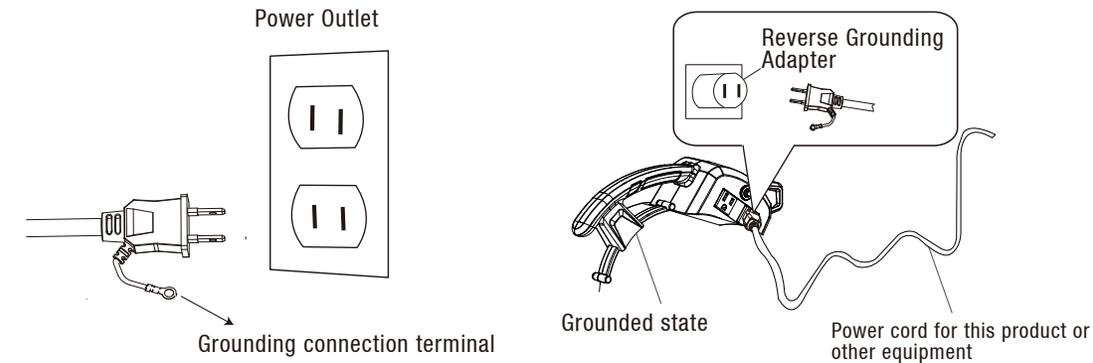

Directly connect to power source(Figure 1) Power extraction in grounded state(Figure 2)



WARNING


To prevent malfunctions and unexpected accidents, please observe the following precautions:

- To prevent electric shock and leakage currents, when connecting multiple units together, use a reverse-grounding adapter capable of converting from 2-pin to 3-pin connections, as shown in Figure 2.
- Similarly, when drawing power from this product to other devices, if those devices have a single-insulation structure, always ground them using a reverse-grounding adapter as shown in Figure 2 to prevent electric shock and leakage current.
- Electrical work such as installing grounding wires by burying grounding rods or plates requires a licensed electrician. Consult your local electrical contractor.


OPERATING INSTRUCTIONS

5 COMBINED USE / USE WITH OTHER DEVICES

When connecting multiple units of this product together, up to 7 units can be connected in 50Hz regions and up to 5 units in 60Hz regions. This product can handle a maximum of 1000W. Ensure the total power consumption of all connected devices does not exceed 1000W.

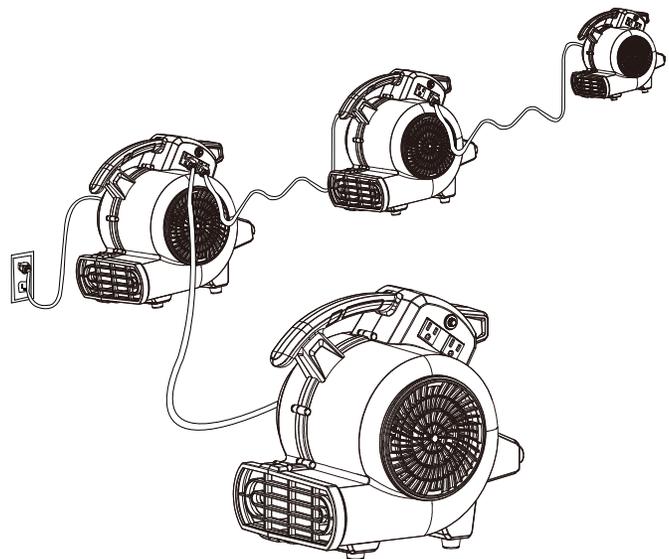

This product incorporates a circuit protector to safeguard the unit from overcurrent during overload conditions. When the circuit protector activates, the current will be interrupted. Therefore, turn off the power to all connected devices, press the breaker switch on the right, and then turn the power back on to the connected devices.

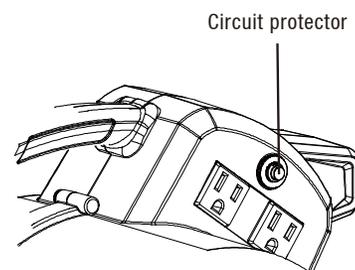

! This air mover is equipped with a motor overheat protection device. If the protection device activates, the power may turn off without warning. If this occurs, turn the switch to the OFF position, unplug the power cord, wait a moment, then plug the air mover's power cord back in to restart it.

MAINTENANCE AND STORAGE



WARNING

To prevent malfunctions and unexpected accidents, please observe the following precautions:

- Always unplug the power cord from the outlet before performing any maintenance.
- Do not use solvents for cleaning. This may cause deformation or malfunction.
- Do not spray water on this product or immerse it in water.

Daily Maintenance

Fine dirt such as dust and powder can cause malfunctions.

- 1) Wipe the main unit with a cloth dampened with water and a mild detergent.
- 2) After using this product in a dusty environment, blow air into the intake vent with an air duster to remove dust.

Storage Instructions

- 1) Always store indoors.
- 2) After use, either wrap the cord around the carry handle for storage or use the cord strap.
- 3) If not using for an extended period, store in a plastic bag to prevent accumulation of dust and other fine debris.

TROUBLESHOOTING



WARNING

Unplug before disassembling or servicing.

All disassembly and repairs should be performed by qualified personnel. Minor problems often can be fixed without calling customer service.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PROBLEM	CAUSE	SOLUTION
Unit will not run.	1. No power to unit. 2. Switch not on. 3. Circuit breaker tripped.	1. Plug unit in. Check circuit breaker. 2. Place in "ON" position. 3. Reset circuit breaker.
Unit runs but Air Mover makes loud scraping noise.	1. Unit has been severely jolted causing blower wheel to rub against housing or housing to deform.	1. Contact customer service.
Unit runs but vibrates excessively.	1. Dirt build up on one side of Air Mover blower wheel. 2. Severe jolt has bent motor shaft.	1. Clean blower wheel blades. 2. Contact customer service.
Unit runs but blower wheel does not turn	1. Blower wheel is jammed against housing.	1. Contact customer service.
Unit runs briefly, then shuts off on overload.	1. Intake grille and /or exhaust grille is obstructed. 2. Motor bearings are failing or motor has developed an internal electrical fault.	1. Remove obstruction. 2. Contact customer service.

WARRANTY

1) Warranty Coverage

If any manufacturing defects occur in the product you purchased, Alton Japan will repair it free of charge.

2) Matters for Which We Cannot Guarantee

a) Transportation costs during repairs

b) The following faults are not covered under warranty repair if determined to be caused by the items listed below

- Use contrary to the instructions in the manual.
- Due to improper care or storage.
- Use exceeding the specifications provided by our company.
- Unauthorized disassembly and modification.
- Use of non-genuine parts or lubricants other than those specified.
- Damage caused by careless use (such as freezing or dropping).

c) The following items are not covered under warranty repairs

- Malfunctions due to aging.
- Natural fading of plastic enclosures, deterioration of power cords, and performance degradation due to component deterioration.
- Sensory phenomena (such as operating sounds or vibrations) that do not affect quality or functionality during use.
- Malfunctions caused by natural disasters such as typhoons, floods, and snow damage.
- Malfunctions caused by chemicals, salt damage, etc.

d) We cannot bear the costs of the following items

- Inconvenience and loss due to the equipment being unavailable.
- Repair costs not covered by the conditions stated in this warranty.
- Damage, discoloration, or deterioration of items caused by the use of equipment.

3) On-site repair

We do not offer on-site repair services. For repairs, please contact the retailer where you purchased the product or Alton Japan.

4) Warranty Coverage

This warranty applies only to our products used within Japan.

If taken outside the country, the warranty will be void at that time.

5) How to Apply for Warranty Repairs

Please send the defective item along with the receipt or delivery note you received at the time of purchase and the warranty certificate attached below to the retailer where you purchased the item or to Alton Japan. Please note that free repairs cannot be provided if the receipt or delivery note is not included.

MEMO

保証書

レシート貼り付け欄

保証書

お買い上げ日	年 月 日	保証期間：1年
お客様	ご住所：	
	お名前：	電話：
販売店	住所：	
	店名：	電話：
(故障状況)		

アルトンジャパン株式会社 〒130-0022 東京都墨田区江東橋2-2-3 三和ビル7階
お問い合わせ先: <https://www.altonjapan.co.jp/contact>